## Stelrad Group plo

# Technical Data Lecco Stainless Steel





# Technical Data Lecco Stainless Steel

### Technical information

#### **Testing and Operating Pressures**

Henrad Lecco Stainless Steel has been independently tested to ensure these radiators perform to a maximum working pressure of 4.0 bar.

#### **Finish**

Stainless Steel.

#### **Water Treatment**

Installation of the system should be properly flushed and fitted in accordance with the British Code of Practice for the Treatment of Water in Domestic Hot Water Central Heating Systems.

#### Warranty

Henrad Lecco Stainless Steel comes with a 5 year manufacturer's warranty.

### Henrad Lecco Stainless Steel

#### **Wall Mounting Information**

All dimensions in mm.

Place your radiator at least 12.5cm above the floor.

Provide insulation by wrapping PTFE tape on the treads before installing the valves

Apply silicone seal fluid to all treated parts containing o-rings. Connect your radiator to the utilities after following all the installation steps in the manual.

After connecting to the utilities, do not forget to discharge the trapped air inside the radiator.


















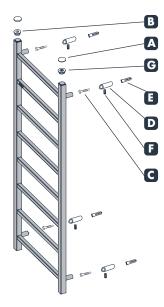

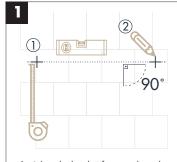

- Adjust the height of your radiator by using a metric ruler.
- 2- Set the location of your radiator as desired, align with the ground by using a spirit level and mark the position of the wall mounting brackets.

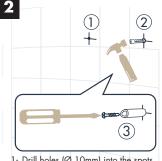

- Drill holes (Ø 10mm) into the spots you have marked.
- 2- Nail the wall plugs (E) in the holes by using a hammer.
- Screw the wall mounting brackets all the way to the holes with the help of a screwdriver.



- Place your radiator into the wall mounting brackets.
- 2- Insert the setscrews (F) into the slots on the mounting brackets (D), adjust the distance between the wall and your radiator then tighten the setscrews by using an Allen key (M3).

Henrad (UK) Limited, Marriott Road, Mexborough, South Yorkshire S64 8BN. Telephone: 0800 876 6813